
LUXION triple Wi-Fi touch switch with glass frame


Triple Wi-Fi touch switch with glass frame that connects directly to the router without a hub and is controlled via app or by voice.

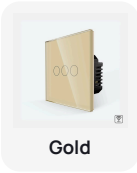


Black


Gold


Grey

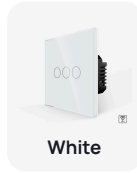
White

CODES


Colour	Code
Black	LX-WT2-301G-B
Gold	LX-WT2-301G-G
Grey	LX-WT2-301G-GY
White	LX-WT2-301G-W

SPECIFICATIONS

Brand	LUXION
Standard	German (Schuko)
Category	Touch switches › Smart Wi-Fi and Zigbee
Connectivity	Wi-Fi
Product type	Triple Wi-Fi touch switch with glass panel (complete set)
Function	Touch, app and voice control; timer, schedule, group control (sharing with family), scenes; configurable state after power failure (on, off or last state)
Number of buttons	3
Operating voltage	160–240 V AC (max. 250 V AC)
Frequency	50/60 Hz
Maximum load	1500 W per channel (resistive), 1000 W per channel (LED / inductive)
Neutral wire (N)	Not required with the Wi-Fi adapter in parallel with a lamp; without the adapter a neutral wire is required
Protocol	Wi-Fi 2.4 GHz 802.11 b/g/n (directly to the router, no hub)
Compatibility	Smart Life app (iOS / Android),

LED indicator	Blue with light on, faint blue with light off; can be disabled from the app
Front material	Safety glass
Glass thickness	4 mm
Base material	Flame-retardant PVC plastic
Front dimensions (W × H)	86 × 86 mm
Depth	35 mm
Fixing screw spacing	60 mm
Mounting	Flush-mounted, in dry indoor residential areas only
Protection rating	IP20
Operating temperature	-20 ~ 70 °C
Operating humidity	≤ 95%
Colours	white, black, grey, gold

DIMENSION DRAWING

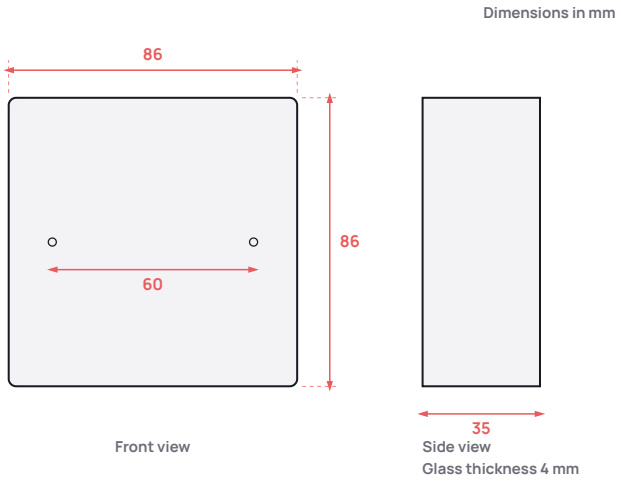

DESCRIPTION

Luxion triple touch switch with glass frame and Wi-Fi. Connects directly to the internet, with no hub needed!

LUXION switches stand out for their compact, elegant and minimalist design. They are versatile in use and the touch sensor is extremely precise, just like on a smartphone. The construction is durable and the switches do not discolour over time. It is a practical product, made from quality materials and built to last, offering functionality and comfort in your home.

Through the Smart Life app you can set timers and schedules, create scenes and share control with your family (group control). The switch is compatible with Amazon Alexa, Google Home and IFTTT.

- LED indicator: blue when the light is on and faint blue when it is off; the LED can be disabled from the app.

Installation: with the Wi-Fi adapter fitted in parallel with one of the lamps, no neutral wire is required. The switch can also be installed without the Wi-Fi adapter, but in that case a neutral wire is needed.

In a classic two-way circuit, the live wire and the wire from the lamp must reach all switches (connected in parallel).

Features

Enjoy the versatility of the new smart switches: LUXION Wi-Fi triple touch switch with a compact, elegant and minimalist design. It does not discolour, so its elegant design stays unchanged.

- 3-button touch control
- Wi-Fi connectivity
- Available in white, black, gold and grey

App and voice control

The triple Wi-Fi switch connects to the Wi-Fi router and is controlled via app or by voice commands. Change the atmosphere of your home with a simple touch and adjust the lighting as you like with the Smart Life app.

- LUXION WIFI switches connect directly to the Wi-Fi router, with no hub required
- For control from your mobile phone you need to install the Smart Life app
- Compatible with Amazon Alexa: switch the lights on or off with a simple voice command, e.g. “Alexa, turn on the light!”

Structure / components

- Elegant glass panel
- Switch mechanism
- Metal mounting frame
- Screw fixing system: 60 mm
- Terminals: N, L, L1, L2, L3

Dimensions

- Overall dimensions: 86 x 86 x 35 mm
- Glass panel depth: 9 mm
- Mechanism depth: 26 mm
- Mechanism height: 49 mm

Installation / wiring diagram

The switch is connected either without a neutral wire in the flush-mounted box (with the Wi-Fi adapter in parallel with the load) or with a neutral wire in the flush-mounted box. Caution: high voltage – disconnect the power supply before installation. For domestic use in dry indoor areas only.

- Option 1: NO neutral wire required in the flush-mounted box
- Option 2: neutral wire required in the flush-mounted box
- 1. Open the package.
- 2. Connect the wires and tighten the screws.
- 3. Fix the frame with the 2 screws.
- 4. Clip the front panel into place.