LUXION by Case-Smart®

DATASHEET
LX-MP016G-B

LUXION telephone socket with blank cover and glass frame

LUXION telephone socket with a blank cover and an elegant glass frame, in white, black, grey and gold.




Black


Gold


Grey


White


CODES

Colour	Code
Black	LX-MP016G-B
Gold	LX-MP016G-G
Grey	LX-MP016G-GY
White	LX-MP016G-W

SPECIFICATIONS

Brand	LUXION
Standard	German (Schuko)
Category	Sockets › TV, network and USB sockets
Product type	LUXION telephone socket with blank cover and glass frame
Number of sockets	1 (telephone socket mechanism + blank cover)
Connector	CAT 3
Front material	Glass
Glass thickness	4 mm
Base material	Plastic base, metal frame
Front dimensions (W × H)	86 × 86 mm
Depth	29 mm (9 mm + 20 mm)
Fixing screw spacing	60 mm
Mounting	Flush-mounted, fixed with 2 screws
Protection rating	IP44
Certifications	CE, RoHS
Colours	white, black, gold, grey

Dimensions in mm

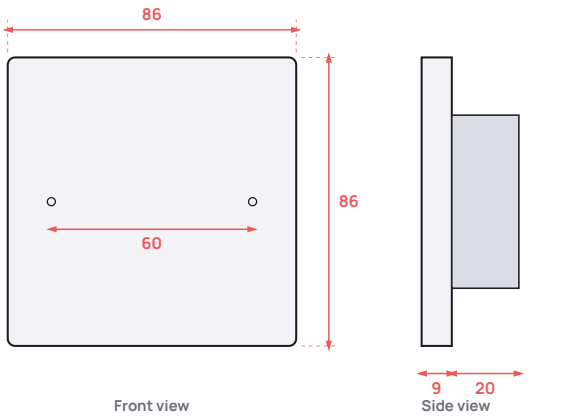

Front view

Side view

Glass thickness 4 mm

DESCRIPTION

LUXION sockets stand out for their compact, elegant and minimalist design. They are versatile, feature child protection, and their latest-generation technology helps to save energy.

The construction is durable and the sockets do not discolour over time. This is a practical product, made from quality materials and built to last, offering functionality and comfort in your home.

The set includes a telephone socket mechanism (CAT 3) and a blank cover, fitted in an 86 x 86 mm glass frame.

Compact, elegant and minimalist design

Enjoy the versatility of the new Luxion products: a telephone socket with a LUXION glass frame.

- Available in white, black, grey and gold

Does not discolour

The elegant design remains unchanged over time.

Structure / components

- Glass frame
- Telephone socket mechanism + blank cover
- Plastic base
- Metal frame

Dimensions and fixing

- Frame: 86 x 86 mm
- Fixing screw spacing: 60 mm
- Depth: 9 mm + 20 mm
- Glass frame thickness: 4 mm
- Mechanism marking: CAT 3

Installation

- 1. Fix the multimedia sockets to the plastic base.
- 2. Fit the sockets at the top.
- 3. Secure the sockets at the bottom.
- 4. Fit the sockets into the metal frame.
- 5. Fit the sockets at the top.
- 6. Secure the sockets at the bottom.
- 7. Use the 2 screws to fix the frame.
- 8. Fit the front panel.